

OUTSIDE ONLY SMOOTH CARR. BOLT HEADS ARE EXPOSED  
THE LOCKWASHERS & NUTS ARE ON THE INSIDE OF THE MAIN POST  
SO WHEN THE TABLE IS FULLY ASSEMBLED THEY ARE NOT ACCESSIBLE

